



Automatic Foam Soap Dispenser Stand Instruction Sheet – 570038

For use **only with** Tork Automatic Foam Soap Dispenser



1. Part Count

- Base and Pole (1)
- Back Plate (1)
- #10 Screws & wing nuts (4)



2. Insert the Back Plate into the Base and Pole.



3. When the peg clicks into place, the Back Plate is secure.



4. Remove electronic cassette from soap dispenser in order to expose the units mounting hole pattern.



5. Align all four screw holes with the holes in the back plate.



6. Insert all 4 screws and secure with wing nuts on the back side. **Secure tightly.**



7. Insert 4 C batteries into cassette following dispenser battery loading instructions. Place cassette inside the dispenser housing, load refill according to dispenser refill loading instructions. Close dispenser using Tork Key.



8. Finished assembly.