



Tork Elevation T2 Mini JBT Dispenser:

T2 System: 555020A (white); 555028A (black)

Dispenser Dimensions HxWxD Inches (cm):

10.8 x 13.6 x 5.2 (27.5 x 34.5 x 13.2 cm)

Refill Product Options (T2 System):

12024402 (Tork Advanced, 2 Ply)

12013903 (Tork Advanced, 1 Ply)

120246 (Tork Advanced, 2-Ply)

Dispenser Parts



Part Description

Replacement SKU

KEY FOR TORK DISPENSER	200260 KEY
T2 HOOD WHITE	225550
T2 HOOD BLACK	225551
ELEVATION LOCK - WHITE	205502
ELEVATION LOCK - BLACK	205503

Part Description with Replacement Instructions

Parts with SKU numbers are available for order as of the revision date on the manual. Contact an SCA Sales Rep or the SCA Tissue Quality Coordinator to order these parts.


Replacement SKU


Description & Replacement Instructions

225550 White 225551 Black	T2 HOOD The hood can be replaced. There is a tabbed pivot on the hood that should be aligned with the notched hole on the back. The notch and tab will line up when the cover is open approximately 45 degrees. Push out to release from back on one side, then the other.
205502 White 205503 Black	ELEVATION LOCK (WHITE OR BLACK) The lock can be replaced by pressing the plastic tabs on each side to free the lock from the opening.
200260 KEY	METAL KEY FOR TORK DISPENSERS


Mounting and Filling Instructions

Installation instruction sheet and mounting template are provided inside each carton.

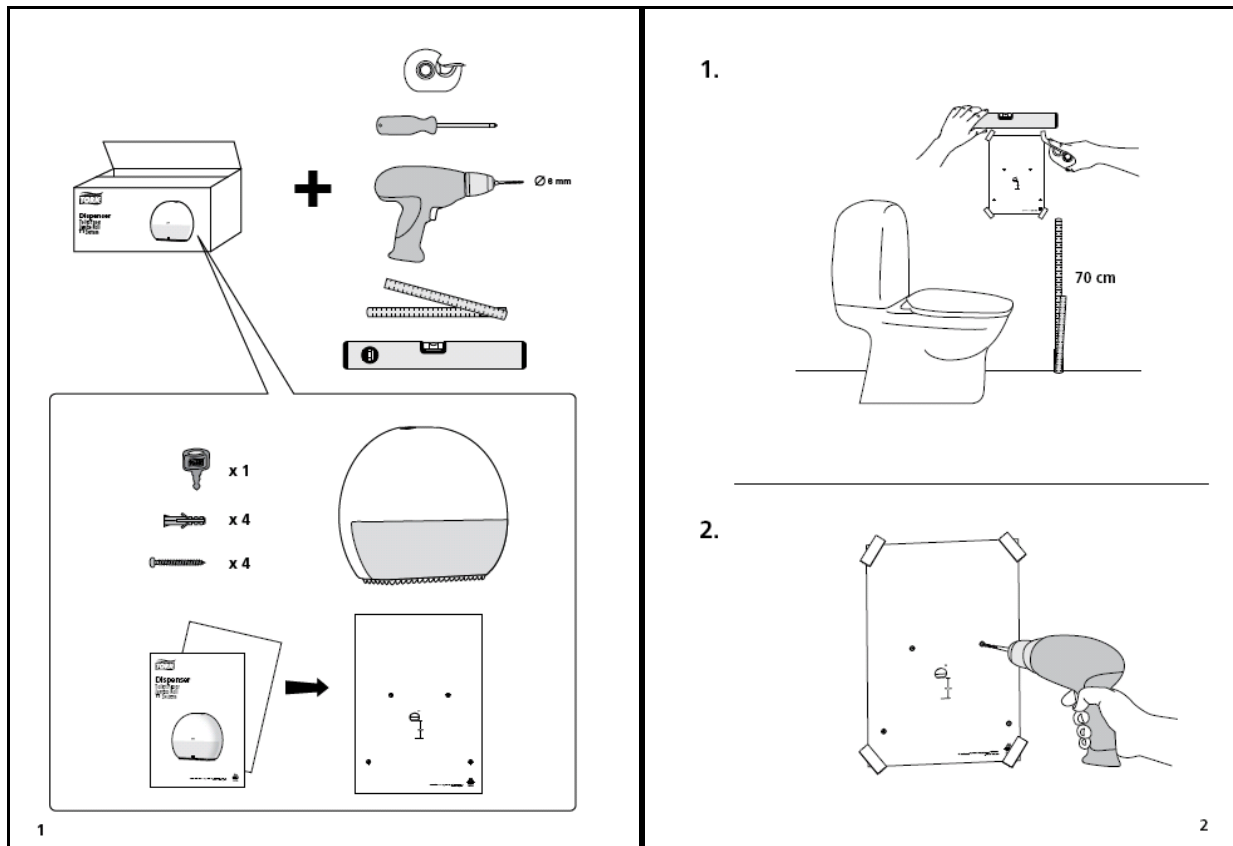


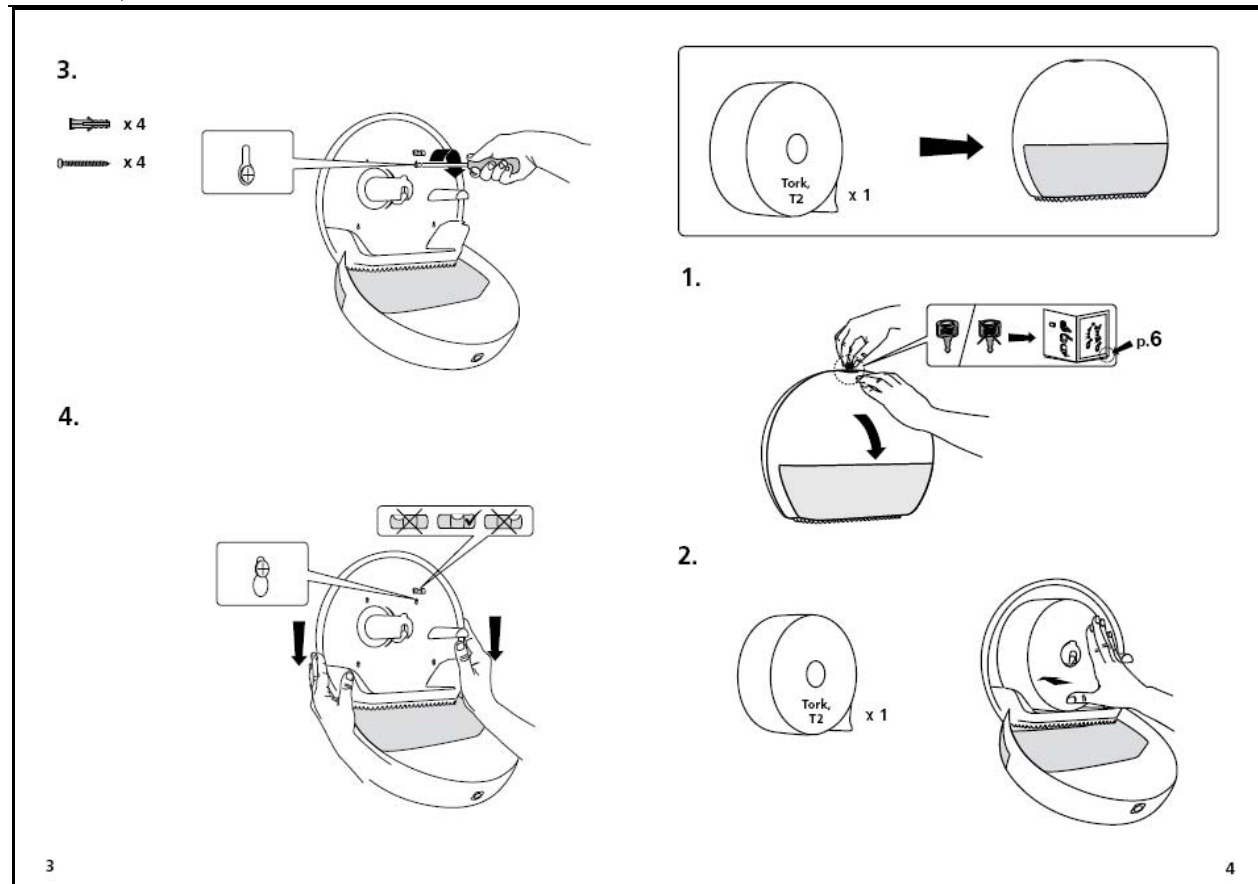

Using Stub Roll Feature

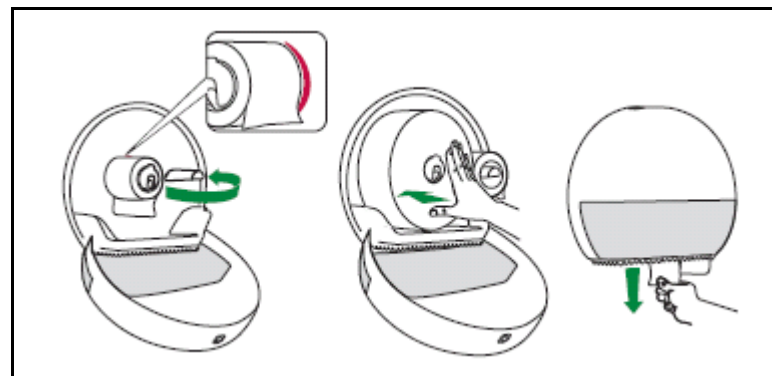

The dispenser has an indication of when the roll may be moved to the stub roll position. When the red mark printed on the back of the dispenser is visible, the roll may be moved onto the stub roll spindle and a new, full roll may be replaced on the main spindle.

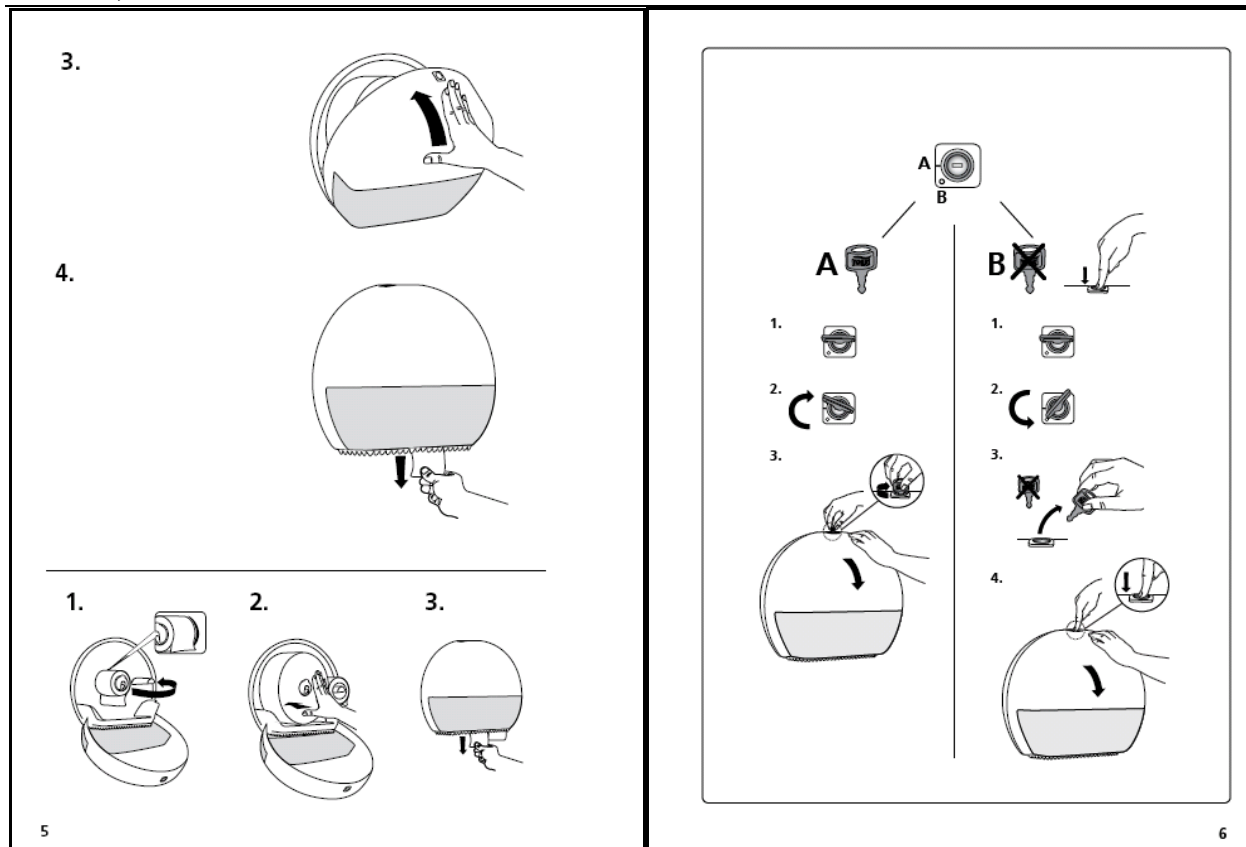

Preventive Maintenance

The dispenser should be cleaned any time there is heavy paper dust build-up inside the dispenser. If paper dust is not a problem, approximately every year is a good frequency for cleanings. The following is the recommended procedure to cleaning:

- 1) Open the dispenser and remove the roll of paper.
- 2) Clean out any paper dust. This can be done in several ways, such as, vacuuming, blowing out with a can of compressed air (wear safety glasses), wiping out with a damp cloth, etc.
- 3) Clean the cover with a general all-purpose cleaner that is safe for plastics.

Troubleshooting

Problem: Any paper-related problem.

- Take note of the date code on the outside of the case of paper product. Then contact the SCA Tissue Quality Coordinator and explain the problem.

Problem: Any other problem not stated above.

- Contact the SCA Tissue Quality Coordinator.

Contacting SCA

To contact the SCA Tissue Quality Coordinator, dial 1-866-722-6659 and press 6.


Product Date Code Location: The assembly date code for the product can be found on the TorkSelect label affixed to the inside back of the dispenser.




Tork Quality
Assurance Hotline:
866-SCA-TORK, Option 6
866-722-8675, Option 6
www.torkusa.com

This **TorkSelect** dispenser is the property of SCA Tissue North America and is loaned for dispensing only **TorkSelect** refills. SCA prohibits the sale, modification, filling or use of this dispenser with non-**TorkSelect** products, and will enforce its rights under applicable laws or agreements.


System: Model No.: Date Code:

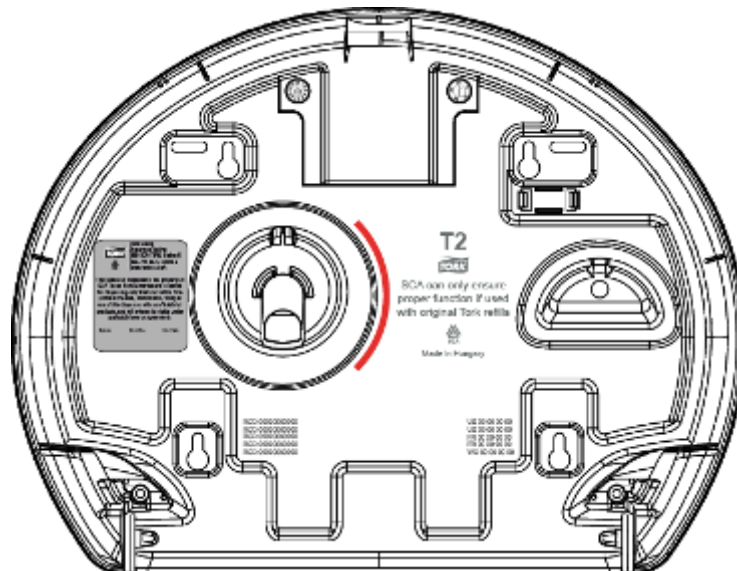

**555020A – 555028A Tork Elevation T2 Mini JBT Dispenser
Mounting Hole Dimensions (mm)**

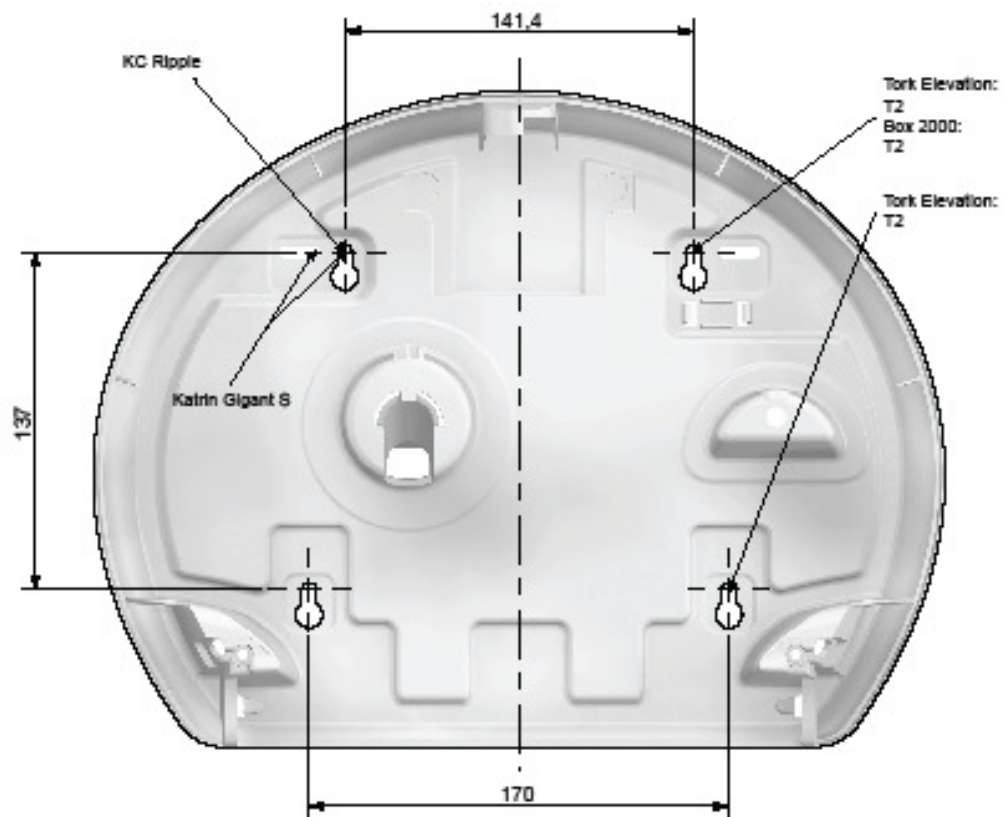


Recommended Mounting Height (standard access)

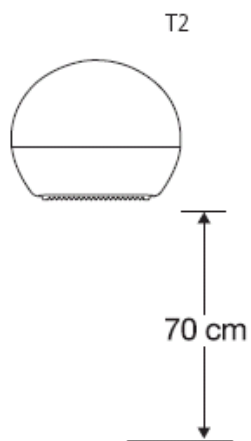

Mount dispenser 27.5" (70cm) above finished floor.

Recommended Mounting Height (ADAAG Guideline)

4.16.6 Dispensers. Toilet paper dispensers shall be installed within reach, as shown in [Fig. 29\(b\)](#). Dispensers that control delivery, or that do not permit continuous paper flow, shall not be used.

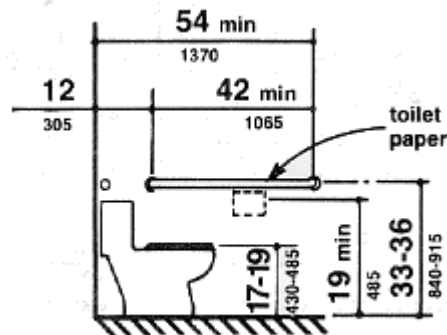

(b)
Side Wall
Figure 29b
Grab Bars at Water Closets
Side Wall

A 42 inch (1065 mm) minimum length grab bar is required to the side of the water closet spaced 12 inches (305 mm) maximum from the back wall and extending a minimum of 54 inches (1370 mm) from the back wall at a height between 33 and 36 inches (840-915 mm). The toilet paper dispenser shall be mounted at a minimum height of 19 inches (485 mm). (4.16.3, 4.16.4, 4.16.6)

Note: Compliance with ADA guidelines is the responsibility of the installer and building owner. Local and state requirements may differ from ADAAG guidelines.